

KROMSKI & SONS

Symphony Instructions for Lubricating Treadles

In order to properly care for your Symphony and to prevent or remove a noisy, squeaky treading in your wheel we recommend routinely applying wax to the treadle support rod, oiling the small cups located inside of the legs.



Using the oil applicator that was supplied with the purchase of your wheel, distribute 3-5 drops of oil into the cups at the locations indicated on the picture. It is important to not apply oil to the areas indicated in the picture as wax only areas as this is not recommended.

The following instructions have been provided to help you put the best care practices into place with your wheel. Please read and follow them carefully.



Step 1: Gain access to the parts that need to be lubricated by removing the treadle from one leg.


This is accomplished by steadily prying the leg in the direction of the arrow shown in this picture while firmly gripping the treadle in your other hand.



Once you have freed the pin from the cup inside of the leg, guide the treadle pin to be in front of the leg.



As it is shown in the picture, embrocate 1 - 2 minutes the thick bar connecting the treadles. It should be done carefully, to obtain thick layer of paraffin on the bar.

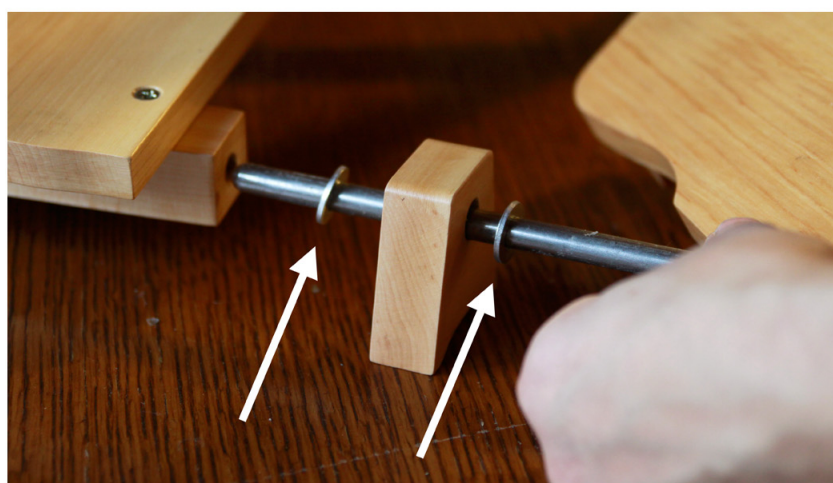


Next, put together back elements, remember about washers shown in the picture.




Tighten the left again and put in the appropriate place.


All woody threads in spinning wheel you should wax by candle when it is needed (for example when the thread works heavily). Usually it is needed once a year.

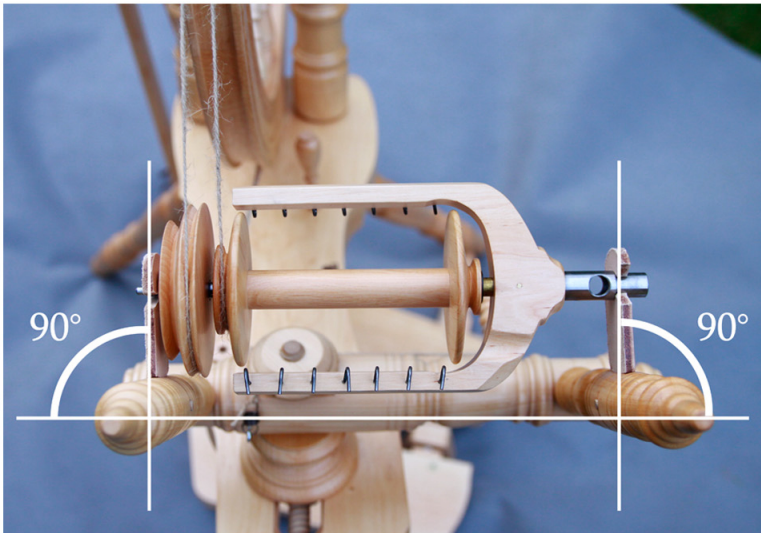


It is very important to set front and rear maiden according to bobbin in appropriate way. Between front and rear leather, and axis of the flyer have to be right angle.

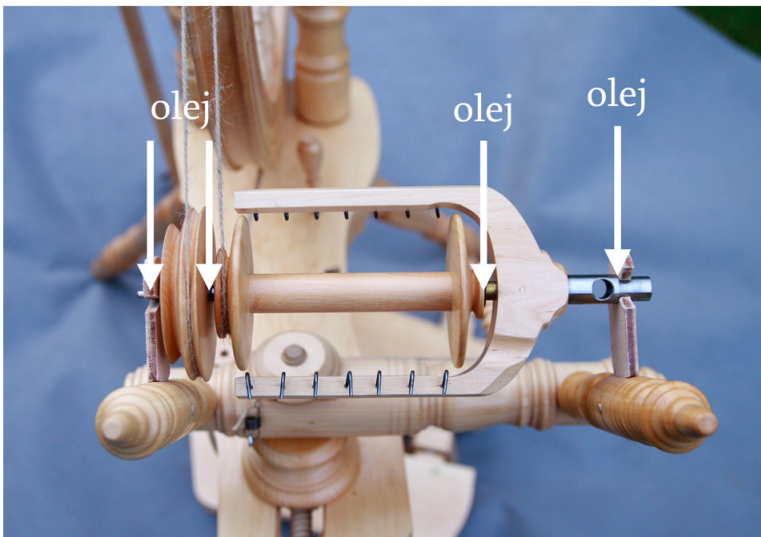

Oil the flyer kit in places marked by arrows in the picture. If you do not oil the bobbin, it will overuse prematurely and will work loudly or will spin heavily.

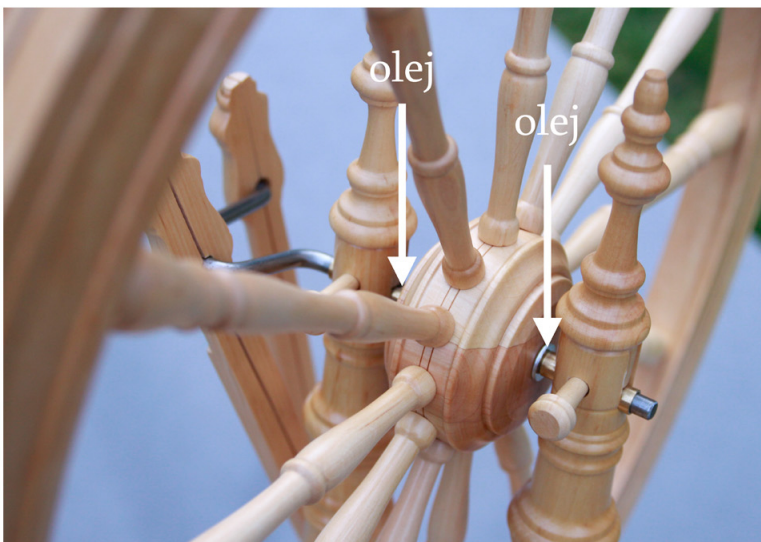

Oil brass bush by crank of the wheel

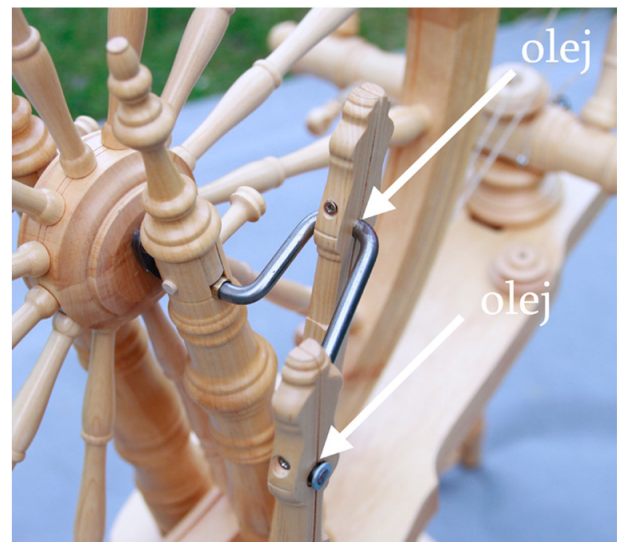

and places by footmen.